



P360 Push Trolley
Instruction Manual

REGISTER ONLINE
www.motocaddy.com/warranty

Locating your Serial Number

Locating your Serial Number

The serial number for the Motocaddy P360 push trolley is located inside the accessory compartment on the handle. This number is required when registering your warranty online and should be kept handy for future use.

The same number should also be on the box received with your trolley. Please ensure you keep hold of the packaging in case you need to return your trolley for any reason. A proof of purchase must also be kept in case your trolley requires servicing during its warranty period.

Please keep a record of your trolley serial number here for future reference

M	C	P	3									
---	---	---	---	--	--	--	--	--	--	--	--	--

Attaching the Wheels

The Motocaddy P360 has no definitive left or right wheel.

To attach the rear wheels, slide the release button down (fig. 1) and slide the wheel axle into the housing. You may need to lift the handle slightly to access the wheel release button.

To attach the front wheel, push and hold the release button on the front wheel (fig. 2) and slide the front wheel housing onto the underside of the trolley frame. You may need to remove the cover from the front wheel axle prior to attachment.

Using the 360° Rotating Front Wheel

The P360 features a fully rotating front wheel to offer ultimate manoeuvrability. It is also possible to fix the front wheel in a forward facing position if required.

To release the front wheel from the fixed position, pull the lever upwards (fig. 3).

To resecure the front wheel, push the lever downwards and the wheel will automatically lock in place once aligned.



Fig 1



Fig 2



Fig 3

Unfolding your Trolley / Adjusting the Handle Height

Unfolding your Trolley

1. Place the trolley on the floor with the front wheel and rear frame touching the ground (fig.1)
2. Hold the upper bag support in one hand and the handle in the other (fig. 2). At the same time pull upwards to release the folding lock (fig. 2 inset). You may need to apply a little force to unclip the folding lock
3. Once the folding lock has been released, continue to raise the upper bag support and handle until the central folding catch clicks into position (fig. 3)

NB : There will be an audible 'click' to indicate the trolley has locked into the unfolded position. It is important to ensure you avoid placing your hand within the folding mechanism during folding and unfolding.

Adjusting the Handle Height

To adjust the handle height, release the handle locking lever (fig. 4) and move the handle into the desired position. Resecure the lever once you have selected the required handle height.



Fig 1



Fig 2



Fig 3



Fig 4

Folding your Trolley

1. Adjust the handle into the highest position
2. Press the folding button located above the upper bag support (fig. 1) to release the folding catch
3. Hold the upper bag support in one hand and the handle in the other and push both towards the ground (fig. 2 & fig. 3)
4. The frame will clip into the folding lock when fully folded (fig. 4)

There should be an audible 'click' to indicate the folding lock has been engaged. It may be necessary to apply a little downward pressure.

NB : You may find it easier to remove the Umbrella Holder (if purchased and fitted) prior to folding.



Fig 1



Fig 2



Fig 3



Fig 4

Using the Upper and Lower Bag Supports

Using the Upper Bag Supports

The upper bag support straps are secured using the following steps:

1. Stretch the elasticated strap around the bag and loop the rounded bar underneath the hook (fig. 1)
2. Position the two placement straps centrally on your golf bag (fig. 2)

Using the Lower Bag Supports

This Motocaddy trolley is fitted with the EASILOCK™ bag attachment system.

If you are using an EASILOCK™ compatible golf bag please follow these simple instructions:

1. Remove the two pre-fitted lower bag straps by depressing the rear button and sliding (fig. 3)
2. Match up the indicating line on the golf bag with the line on the lower bag support
3. Lower the bag until the pins lock in position. You should hear a small click

If you are using a non-EASILOCK™ golf bag, please use the following instructions:

1. Stretch the elasticated strap around the bag and loop the rounded bar underneath the hook
2. Position the two placement straps centrally on the base of your golf bag

Please ensure all straps are hooked in place securely before releasing. Failure to do so could result in injury to the user.



Fig 1



Fig 2



Fig 3

Adjusting the Bag Supports

The bag support straps are manufactured from elasticated material to allow your golf bag to be held tightly in place.

The strap should be adjusted to be reasonably tight around the golf bag:

1. Unclip the elasticated straps from the housing by pulling outwards in the direction shown (fig. 1)
2. Move the bar as required to tighten or loosen the strap fitting. Pulling the bar downwards will tighten, pushing it upwards will loosen (fig. 2)
3. Ensure that the straps are clipped back into the housing before use

Using the Parking Brake

To apply or release the foot brake press down on the pedal (fig. 3).

The foot brake is designed to be used as a parking brake (like a hand brake of a car or foot brake on a pram). When applying the brake, please ensure that the trolley has completely stopped moving.

WARNING: Attempting to apply the brake whilst the trolley is still in motion may cause damage to the trolley and could invalidate the warranty.

Always ensure that the parking brake has been disengaged before attempting to set off again.



Fig 1



Fig 2



Fig 3



Motocaddy Ltd, Units 15 - 18 Stansted Distribution Centre,
Start Hill, Great Hallingbury, Hertfordshire, CM22 7DG, United Kingdom

t: +44 (0)1279 712 370 e: info@motocaddy.com w: www.motocaddy.com



We are dedicated to protecting the environment and encourage the recycling of Motocaddy products through a free collection and disposal service. To find out more or to locate your nearest Motocaddy recycling point, please contact us through our website.

MC.17.45.001

EASILOCK™ Patent (GB) - GB2519073